

Colour television

21PT2324

Operating instruction



**PHILIPS**

# IMPORTANT

## Before you begin:

Make sure your package includes the following items: TV and mains cord, remote control, Instruction manual, antenna cable (optional) and Coaxial cable (optional).

## Attention:

1. Read your manual first – your Philips TV comes with a well-designed remote control and onscreen display to ensure your TV is easy to operate.
2. The tips provided in this manual will save you time and money as charges for TV installation and adjustments of customer controls are not covered under the warranty.
3. For information outside of this manual, such as sales locations and other Philips products, please visit [www.philips.com](http://www.philips.com) which will automatically link you to your local Philips website.
4. Please refer to the 'Troubleshooting Tips' on page 11 before calling for service.
5. In case of a need to call for service, we recommend you to call from your room where your TV is located and have on hand your remote control, warranty card, TV model and serial number.
6. Do not discard packaging materials:
  - without thorough inspection for parts and that accessories that may be packed separately inside the carton.
  - during the warranty period should you need to exchange the set.



## Recycling:

The materials used in your set are either reusable or can be recycled. To minimise environmental waste, specialist companies collect used appliances and dismantle them after retrieving any materials that can be used again (ask your dealer for further details).

*Disclaimer: Graphics in this manual are for illustration purpose and may not represent the actual product*

---

## Table of Contents

### Installation

Installing your television set .....	3
The keys on the TV set .....	3
Remote control keys .....	4
Language .....	5
Tuner Mode.....	5
Auto Store .....	6
Channel Edit .....	6

### Operation

Picture settings .....	7
Sound settings.....	7
Feature settings .....	7
Format .....	8
Signal Strength .....	8
Active Control .....	9
Personal Zapping .....	9

### Peripherals

 
Video recorder .....	10
----------------------	----

### Practical information

Tips.....	11
Glossary .....	12
Specification .....	13

## Safety information

- Disconnect mains plug when :
  - the indicator light below the TV screen is flashing continuously.
  - a bright white line is displayed across the screen.
  - there is a lightning storm.
  - the set is left unattended for a prolonged period of time.
- cleaning the TV screen. Never use abrasive cleaning agents. Use a slight damp chamois leather or soft cloth.
- No naked flame sources, such as lighted candles, should be placed on top of the TV or in the vicinity.
- Do not place your TV set under direct sunlight or heat.
- Leave at least 10 cm around each side of TV set to allow for proper ventilation.
- Avoid placing your set (e.g. near the window) where it is likely to be exposed to rain or water.
- No objects filled with liquids should be placed on top the TV so as to avoid dripping or splashing of liquids on the set.

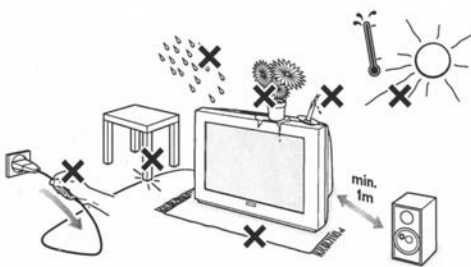


## Useful information

- Do not leave your set on standby mode for a prolonged period of time. Switch off set to allow it to be demagnetised. A demagnetised set supports good picture quality.
- Do not shift or move the set around when it is switched on. Unevenness in colour in some parts of the screen may occur.
- Never attempt to repair a defective TV yourself. Always consult a skilled service personnel.


# Installing your television set
 
## Positioning the television set

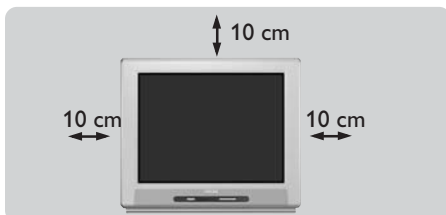


Place your TV on a solid, stable surface, leaving a space of at least 10 cm around the appliance.

## Connections

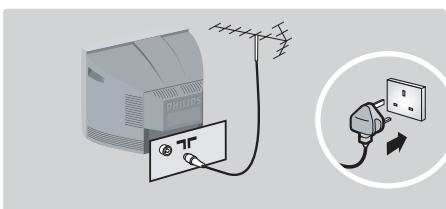 

- Insert the aerial plug into the x socket at the rear of the set.  
*If you are using an indoor aerial, reception may be difficult in certain conditions. You can improve reception by rotating the aerial. If the reception remains poor, you will need to use an external aerial.*
- Insert the mains plug into a wall socket.  
*Diagram may differ from the actual plug.*

## Remote control

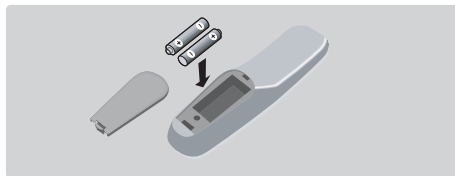 

Insert the two R6-type batteries (supplied) making sure that they are the right way round.

*The batteries supplied with this appliance do not contain mercury or nickel cadmium. If you have access to a recycling facility, please do not discard your used batteries (if in doubt, consult your dealer).*


## Switching on



 To switch on the set, press the on/off key. A red indicator means that the television is on standby mode. Refer to the next page on 'Remote Control keys' for the various keys that you could use to switch on the set. An indicator light will flash when it is receiving signal from the remote control.

## The keys on the TV set

The television set has 4 keys which are located at the front.

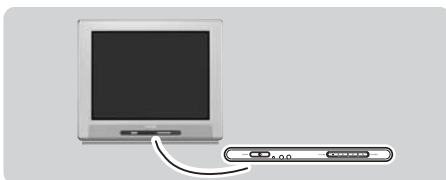


The VOLUME – or + key is used to adjust the sound levels. The CHANNEL  $\lambda$  or v key is used to select channels.

To access or exit the main menu, press down the VOLUME – and + keys, simultaneously.


To select an item in the main menu, press the CHANNEL  $\lambda$  or v key.

To select an adjustment, press down the VOLUME – or + key.


## Remote control keys

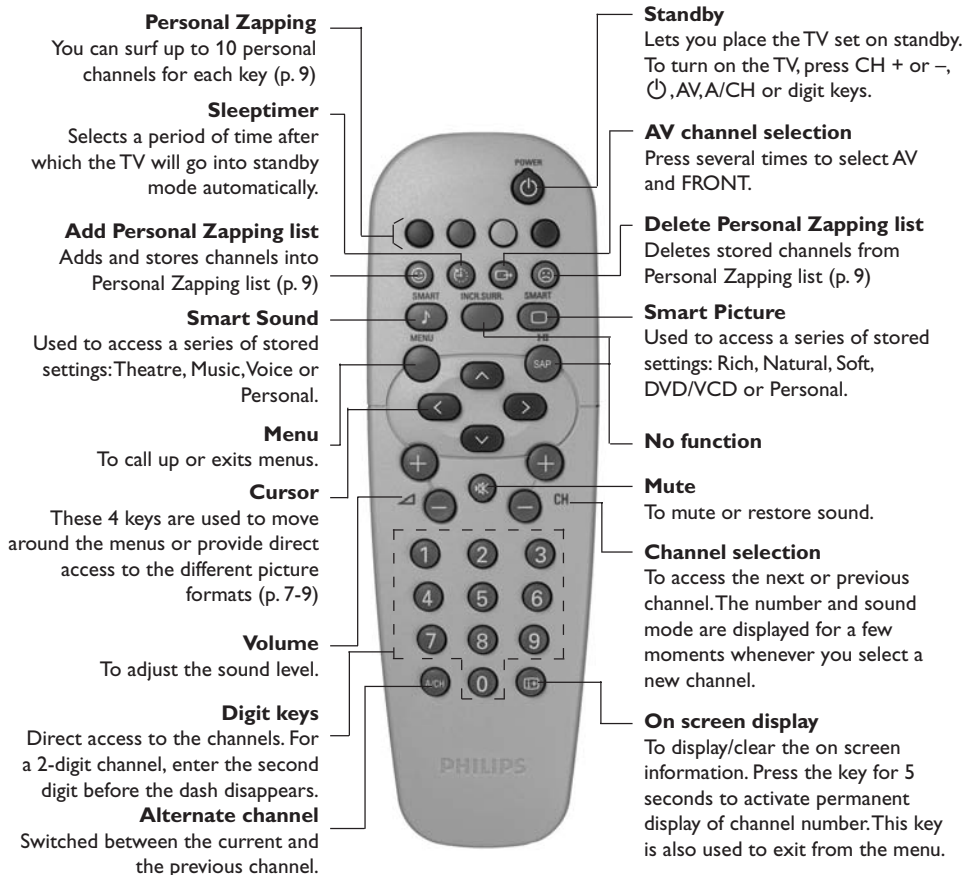 




## Language

 When there is no signal input to the TV, you may encounter instability of the screen display. In this instance, please use the  key to select an AV channel.

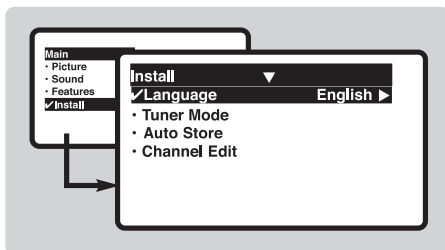
The **Language** feature is used to change the display language for menus.






- 1 Press the  key.
- 2 With the cursor, select the **Install** menu and follow by the **Language**.
- 3 Use the  key to select a language of your choice.
- 4 To quit the menus, press .

## Tuner Mode

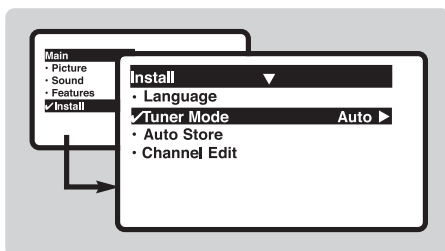 
You can select tAuto,Antenna or Cable modes with this menu.




- 1 Press the  key.
- 2 With the cursor, select the **Install** menu and follow by the **Tuner Mode**.
- 3 Use the  key to select either Auto, Antenna or Cable
- 4 To quit the menus, press .

## Auto Store

 
This menu is used to store all available channels automatically.

- 1 Press the  key.
- 2 With the cursor, select the **Install** menu and follow by the **Auto Store**.

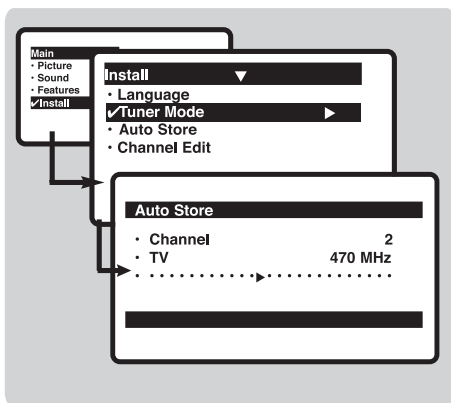

All the available TV channels will be stored. This operation takes a few minutes. The display shows the progress of the search and the number of channels found.

At the end of the search, the menu disappears.

 
To exit or interrupt the search, press .


 


If no channels are found, consult the possible solutions on p.11.

## Channel edit

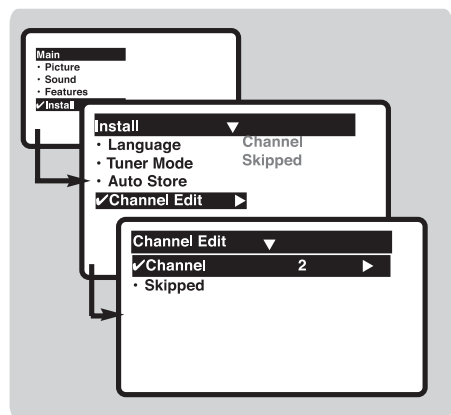


This feature allows you to skip or edit channels which have bad or weak TV signal or channels you do not watch often.

Once a channel is skipped, you cannot have access to it by the Channel + or – key. You can only access the channels by the digit (0-9) keys.





- 1 Press the  key. The **Main** menu is displayed on the screen.
- 2 With the cursor, select the **Install** menu followed by the **Channel Edit** menu.
- 3 Enter into the menu and select the channel number you wish to skip by the digit keys.
- 4 Then use the  key to select **Skipped**. Use the  key to select **On**.
- 5 Repeat steps 3 and 4 for each channel you wish to skip.
- 6 To quit the menus, press .

 
### To restore skipped channels








- 1 Repeat steps 1 to 3 above.
- 2 Use the  key to select **Skipped** and the  key to select **Off**.
- 3 Repeat steps 1 and 2 for each channel you wish to skip.
- 4 To quit the menus, press .

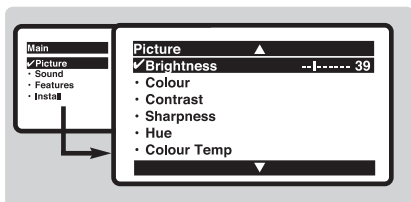

## Picture settings

- 1 Press  then . The **Picture** menu is displayed:






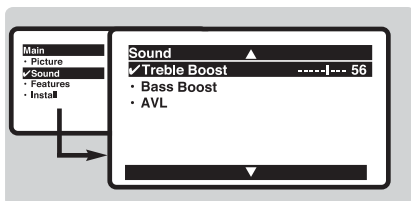 
- 2 Use the  or  keys to select a setting and the  or  keys to adjust.  
*Note: during the picture adjustment, only the selected line remains displayed. Press  or  to display the menu again.*
- 3 Press  to exit.






### Description of the adjustments:

- **Brightness**: this changes picture brilliance.
- **Colour**: this changes the intensity of the colour.
- **Contrast**: this changes the difference between the light and dark tones.
- **Sharpness**: this changes the picture definition.
- **Hue**: this adjusts the skin colour tone.
- **Colour Temp.**: this changes the colour rendering: Cold(bluer), Normal(balanced) or Warm(redder).
- **NR**: attenuates picture noise (snow) in difficult reception conditions.
- **Contrast +**: automatic adjustment of the picture contrast which permanently sets the darkest part of the picture black.

## Sound settings

- 1 Press , select **Sound** () and press . The **Sound** menu is displayed.






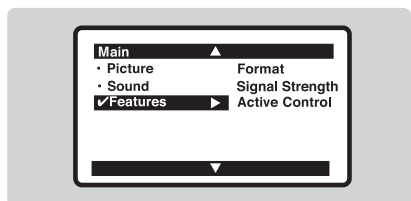 
- 2 Use the  or  key to select a setting and the  or  key to adjust.
- 3 Press  to exit.

### Description of the adjustments:

- **Treble Boost**: this alters the high frequency sounds.
- **Bass Boost**: this alters the low frequency sounds.
- **AVL** (Automatic Volume Leveller): this is used to limit increases in sound, especially on channel change or advertising slots.

## Features settings

- 1 Press , select **Features** () and press . The **Features** menu is displayed:


 

 





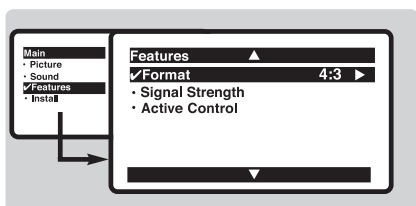 
### Description of the features:

- **Format**: see explanation on the next page.
- **Signal Strength**: see explanation on the next page.
- **Active Control**: see explanation on the next page.

## Format

 
This feature enhances your viewing pleasure by providing you with a choice of two picture formats:- **4:3** and **Expand 4:3**.

- 1 Press , use the  or  key to select **Features** and press the  key. The **Features** menu is displayed.
- 2 Use the  key to select **Format** and press the  key to select **4:3** or **Expand 4:3**.
- 3 Press the  key to exit.




### Description of function:

**4:3** – select this format if you want to display a conventional picture using the full surface of the screen.

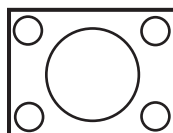


4:3

  **Expand 4:3** – select this format if you want to expand pictures transmitted in a 'letterbox' format (black horizontal bars at the top and bottom of the screen) to fill up the entire screen.

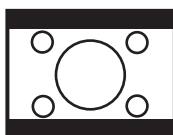


 

 
Letterbox

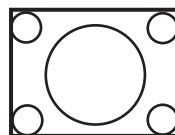






Expand 4:3

## Signal Strength

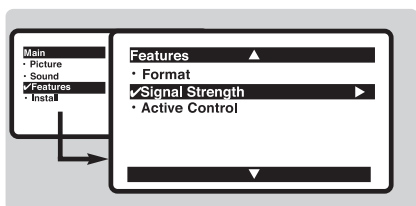 This feature display the signal strength level at the bottom of the screen. Select the option **ON** to activate the display each time you switch to a new channel.


- 1 Press , use the  or  key to select **Features** and press the  key. The **Features** menu is displayed.



- 2 Use the  or  key to select **Signal Strength** and press the  key to select **On**.
- 3 Press the  key to exit.

## Active Control

 The Active Control monitors and adjusts incoming video signals to help provide the best picture quality. When you choose to turn the Active Control On or Display On, the Brightness, Contrast, Sharpness, Contrast+ and NR (noise reduction) features are controlled automatically. Active Control adjusts these picture settings continuously and automatically

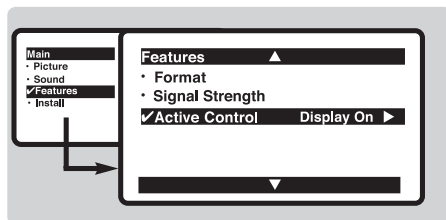

- 1 Enter Features menu as described in "Features settings" on the previous page.
- 2 Use the key to select Active Control and press the key to select **Off**, **On** or **Display On**.

- 3 Press the key to exit.

### Description of option:

**Off:** the Active Control will not be activated.

**On:** the Active Control will work to give the viewer the best possible picture, but will not display the monitoring screen when channels are changed.

**Display On:** an Active Control monitoring screen will be shown for a few seconds whenever a channel is changed.

Brightness	-- ----- 39
Colour	-- ----- 39
Colour Temp	Cool
Sharpness	- ----- 18
Contrast +	On
NR	On

 
Active Control Monitoring Screen

## Personal Zapping

A list or series of favourite TV programs can be selected and stored in the 4 coloured keys with the Personal Zapping feature. With this feature you can easily viewed up to a total of 10 preferred channels for each coloured key.


### To add channels:

- 1 Select a channel with the digit keys.
- 2 Press to display list.
- 3 Press your favourite colour key to store the channel in step 1.
- 4 Repeat steps 1 to 3 to store more channels.
- 5 Press to exit.

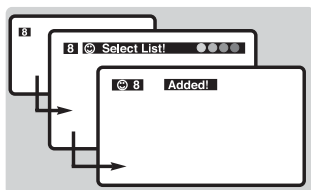

### To delete channels:

 - 1 Select and press a colour key that has stored channels repeatedly to select the channel you want to delete.
- 2 Press to display list.
- 3 Press to remove channel.
- 4 Repeat steps 1 to 3 delete more channels.
- 5 Press to exit.

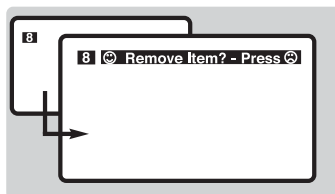


### To view channels:

Select and press a colour key that has stored channels repeatedly to select the channel you want to view.

## Connecting peripheral equipment

The television has 2 external sockets situated at the back of the set
 
### Video recorder

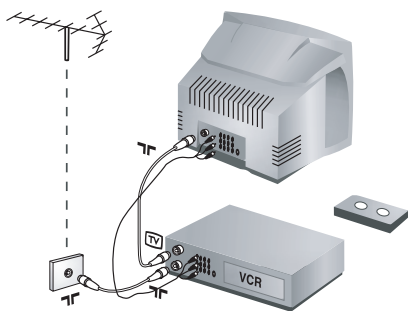


- & Connect the TV's yellow and white (AV1 in) jacks to the corresponding Video and Audio jacks on the player.
  - é Connect the TV's white AUDIO IN jacks to the corresponding AUDIO OUT jacks on the player. Match the cable colour to the jacks' colour. The white jack is the Left (Mono) audio channel.
  - " Turn on the TV and VCR player. Set the TV to AV1. You can now play your video cassette tape.
- Connection is also possible via the aerial cable. You will therefore need to tune in your video recorder's test signal and assign a channel number 0. Select channel 0 to playback.*

## Tips

### Poor reception

The proximity of mountains or high buildings may be responsible for ghost pictures, echoing or shadows. In this case, try skipping channels with bad or weak TV signals: see “Channel Edit” (p. 6) or modify the orientation of the outside aerial. Does your antenna enable you to receive broadcasts in this frequency range (UHF or VHF band)? In the event of difficult reception (snowy picture) switch the **NR** on the **Picture** menu to **ON** (p. 7).

### No picture

If the television does not switch on, press the standby key  (located on the remote control) twice. Have you connected the aerial socket properly? Have you chosen the right tuner mode? (p. 5).


Poorly connected aerial sockets are often the cause of picture or sound problems (sometimes the connectors can become disconnected if the TV set is moved or turned).

Check all connections.

### Colour patches on screen

Switch off the TV by the mains power button and wait for about 20 minutes before switching on again.

### Good picture but no sound

Try to increase the volume level. Check that the sound is not set to “mute”. If it is, press the  key to restore the sound.

### Good sound but poor colour or no picture

Try to increase the contrast and brightness setting.

### Snowish picture and noise

Check antenna connection at the rear of the TV.


### Horizontal dotted lines

Possible electrical interference e.g. hairdryer, vacuum cleaner, etc. Switch off the appliances.

### Double or “Ghost” images

Possible poor positioning of antenna. Using a high directional antenna may improve reception.

### Peripheral equipment gives a black and white picture

You have not selected the socket connection to the right channel with the  key: for example, AV1 in socket connection should select channel AV1 to playback. To play a video cassette, check that it has been recorded under the same standard (PAL, SECAM, NTSC) which can be replayed by the video recorder.

### The remote control does not work

Check that the batteries are the right way round and there is no obstruction between the remote control and the TV. If the light indicator on the set no longer flashes when you use the remote control, replace the batteries.

---

## Glossary

### **4:3**

Refers to the ration between the length and the height of the screen. Wide screen televisions have a ration of 16:9 while conventional televisions have a ratio of 4:3.

### **4:3 Expand**

The images recorded in “letterbox” format are expanded to fill the entire screen and the black horizontal bars at the top and bottom are removed.

### **Active Control**

Is a unique, intelligent, and proactive control system, which measures and analyzes the incoming analog signal 60 times per second to automatically adjust settings for optimal picture quality. It also uses a sensor to adjust for ambient room light; when the room gets brighter, so does the picture.

### **Contrast+**

enhances the darker portions of the picture to improve its picture quality.

### **Personal Zapping**

A Philips trade marked feature which allows any combination of favourite teletext pages or TV channels to be stored in the coloured Favourite Channels/Teletext keys. A total of 10 preferred channels/teletext pages of the same subject or user can be stored in each coloured key.

# Specification

## Product type

21PT2324/71

## PICTURE

- Picture screen diameter: 525 mm
- Visible screen size: 510 mm
- Smart Picture Modes
- Brightness Control
- Colour Control
- Contrast Control
- Sharpness Control
- Colour Temperature Control
- Contrast Plus
- Noise Reduction
- Active Control
- Signal Strength Indicator

## Sound

- Sound output: 1 x 4 W
- Loudspeakers: Full range
- Smart Sound Modes
- Auto volume Leveller

## Reception

- Tuning system: PLL digital tuning
- Tuner: UV, S and Hyperband
- Channel Selection: 125 presets, Full cable
- Aerial input: 75 ohm coaxial
- TV System: NTSC M (3.58-4.5)
- Video playback: NTSC 3.58, NTSC 4.43, NTSC Palyback, PAL 60

## Connectors

- Rear: Stereo Audio/Video input x 2  
Stereo Audio/Video output x 1  
Component Video Input  
S-Video input

## Ease of use

- Multi language on screen display
- Personal Zapping
- Alternate channel
- Sleeptimer

## Size and weight

- Set dimensions: L x D x H mm  
(522 x 479 x 461) mm
- Net weight: 23.2 kg

*Specification subject to change without notice.*

